

GA096FX

Ranger Wildtrak Tonneau Cover



Amendments to fitting instructions Step 02, Step 07 and Step 13

Step 02

Remove torx bolts as per previous instructions. Remove the 4 trim pieces as required. Cut and remove a +-8mm section of the ridge on the 4 trim pieces as illustrated. The Keko brackets should now align with the holes in the vehicle trim pieces.




Step 13

Place the trim piece (removed in Step 01) over the installed Keko brackets and mark where the trim needs to be cut. Cut these pieces out as illustrated.



Step 07

Bolt the 4 Keko brackets in place, making sure that the original trim piece bracket is bolted below the Keko bracket. This trim bracket should fit flush to the Keko bracket.

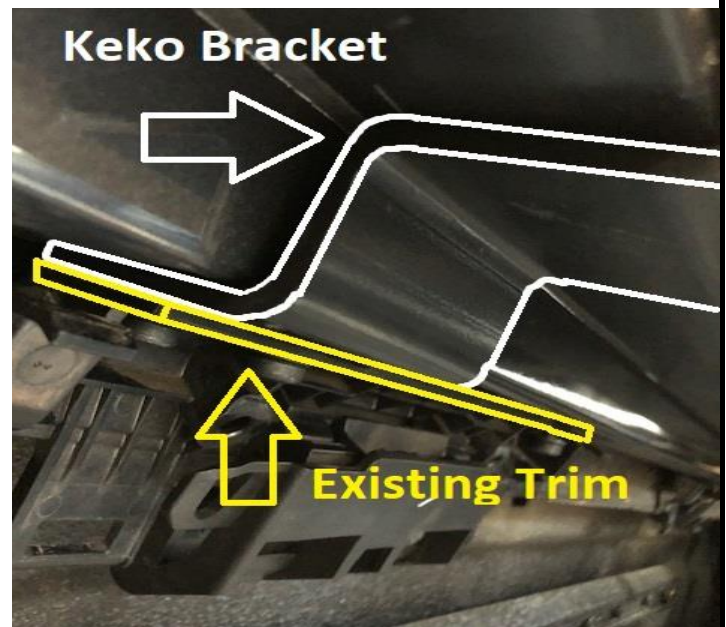

Note:

A small deviation in the trim piece will occur as shown. This can be ignored. Note how the trim piece cut earlier fits over the Keko bracket.

